

# Yankee

illustrated parts catalog



Model AAI

ALPHABETICAL



INDEX



## ALPHABETICAL INDEX

BY PAGE NUMBER

### A

Access Panel - Wing Root, 9  
Actuator Assy - Flap, 51  
Actuator Assy - Trim, 59  
Adapter - Carb. Box to Filter, 64  
Adapter - Filter to Duct, 64  
Adjustment Plate - Seat, 23  
Altimeter, 85, 91  
Aileron Assy, 6  
Aileron Assy, 42  
Air Filter, 64  
Airspeed Indicator, 85, 91  
Air Vent - Cover, 3  
Air Vent - Grille, 3  
Air Vent - Lever, 3  
Air Vent - Seal, 3  
Anti-Skid Strip, 9  
Axle - Nose Gear, 30  
Axle - Rod - Nose Gear, 30

### B

Baggage - Floor, 3  
Back Plate Assy - Main Gear, 33  
Back Plate Assy - Spinner, 62  
Baffle Assy - Engine, 66  
Baffle - Fuel Tank, 73  
Baffle Strap Assy, 66, 67  
Bar Assy - Rudder, 49  
Base Assy - Seat, 23  
Base Panel - Cover, 3  
Battery - Box, 3  
Battery - Cover Assy, 3  
Battery, 3  
Battery - Shield, 3  
Battery - Support Assy, 3  
Battery - Tie Down, 3  
Battery - Tie Down Rod, 3  
Bearing - Support, 6  
Bellcrank - Control Column, 51  
Bellcrank Assy, Rudder, 14  
Bellcrank Assy Horizontal Stabilizer, 11  
Blast Tube Assy, 67  
Bleeder - Screw, 34  
Boot Assy - Nose Gear, 30  
Bracket Assy, 6

Bracket - Canopy Lock, 16  
Bracket Assy - Main Fairing LH, 37  
Bracket Assy - Main Fairing RH, 37  
Bracket - Nose LH, 38  
Bracket - Nose RH, 38  
Bracket Assy - Main Landing-Gear, 27  
Bracket Assy - Trim Wheel, 57  
Bracket Assy - Bungee, 59  
Bracket Assy - Spinner, 62  
Brake Assy Main Gear, 33  
Brake - Hose Assy, 79  
Brake - Housing, 83  
Brake - Installation, 49  
Brake - Master Cylinder, 83, 49  
Brake - Pedal, 49  
Brake - Shuttle Valve, 79  
Brake System, 79  
Bulkhead, 3  
Bulkhead - Spinner, 62  
Bumper - Seat, 23  
Bungee Assy, 59  
Bungee - Housing Assy, 59  
Bungee - Link Assy, 59  
Bungee - Mounting Plate Assy, 59  
Bungee - Support Assy, 59

### C

Cable Assy, 4  
Cable Assy - Control System, 40  
Cabin Dome Light, 93  
Canopy Lock, 16  
Canopy Assy, 16  
Canopy Lock - Bracket, 16  
Canopy - Seal, 16  
Carb Heat Tube Assy, 64  
Child's Seat Installation, 112  
Cigar Lighter, 91A  
Circuit Breaker, 91  
Clock, 91A  
Cluster Assy - Instrument, 91  
Column Assy - Control System, 40  
Compass Assy, 91  
Compass Card Holder, 91  
Control - Cabin Heat, 91  
Control Column Assy, 51  
Control Column - Bellcrank, 51  
Control Column Horn Assy, 51



## ALPHABETICAL INDEX

BY PAGE NUMBER

### C (Cont.)

Control Column Push Rod Assy, 51  
 Control Column Tee, 51  
 Control Column Universal Joint, 51  
 Control - Flap, 54  
 Control - Heat, 89, 91  
 Control - Mixture, 91  
 Control - Parking Brake, 81, 91  
 Control - Pulley Group Assy, 45  
 Control - Throttle, 91  
 Control Surface Assy Horizontal RH &  
 LH, 11  
 Control Surface Assy - Vertical, 14  
 Control Tee Instl, 40  
 Control Wheel, 51  
 Cover Assy Battery, 3  
 Cover - Air Vent, 3  
 Cover - Instrument Panel, 3  
 Cover - Seal, 23  
 Cover - Tail, 4A  
 Cowl Assy, 19  
 Cowl Assy - Door, 19  
 Cowl Assy - Forward, 19  
 Cowl Assy - Lower, 19  
 Cowl Assy - Upper, 19  
 Cushion Assy - Seat, 23  
 Cylinder Assy - Brake, 49  
 Cylinder - Main Gear, 33

### D

Deck, 3  
 Detector - Lift, 93  
 Door Assy - Cowl, 19  
 Dome Light - Cabin, 93  
 Directional Gyro, 87, 91A  
 Drain Assy - Vent, 21  
 Duct Assy - Induction Air, 64  
 Duct - Heating System, 89

### E

Elevator, 11, 12  
 Elevator Cable Assy, 47  
 Elevator Tip, 12  
 Electric Fuel Pump, 70, 77  
 End Plate Assy - Fuel Tank Inlet, 73  
 End Plate Assy - Fuel Tank Outlet, 73  
 Engine, 64A  
 Engine Baffle Assy, 6  
 Engine Mount Assy, 3  
 Engine Strap Support, 64  
 Exterior Styling, 106

### F

Fairing Assy, 9  
 Fairing Canopy, 16  
 Fairing Assy Main LH, 37  
 Fairing Assy Main RH, 37  
 Fairing Assy Nose, 38  
 Felt - Grease Seal Main Gear, 33  
 Flange Assy - Control System, 42  
 Flange - Spar Stiffener, 42  
 Flap Assy, 6  
 Flap Actuator Assy, 54  
 Flap Assy - Control System  
 Flap Indicator Assy, 54  
 Flap Link Assy, 55  
 Flap Torque Tube Assy, 6  
 Filter - Vacuum System, 87  
 Fin, 14  
 Firewall, 3  
 Fire Extinguisher, 107  
 Fitting Assy - Fuel Tank, 73  
 Flashing Beacon, 97  
 Flexible Coupling - Trim, 57  
 Floor - Baggage, 3  
 Fork Assy - Nose Gear, 30  
 Forward Cowl Assy, 16  
 Frame Assy - Canopy Aft, 16  
 Frame Assy Canopy Fwd, 16  
 Frame Assy - Seat, 23  
 Frame Windshield, 16  
 Fuel Manometer Light Instl, 93A  
 Fuel Tank Baffle, 73  
 Fuel Pump - Electric, 70, 77  
 Fuel Primer, 69, 91  
 Fuel Valve, 69  
 Fuel Valve Handle, 69  
 Fuel System, 69  
 Fuse Holder, 91  
 Fuse Holder, Spare, 91  
 Fuselage Assy, 3

### G

Gauge - Suction, 87, 91A  
 Glare Shield Assy, 3  
 Glare Shield Assy, 93  
 Glove Box and Door, 103  
 Grill - Air Vent, 3  
 Guide Assy - Trim Actuator, 59  
 Gyro - Directional, 87, 91A  
 Gyro - Horizontal, 87, 91A



## ALPHABETICAL INDEX

BY PAGE NUMBER

### H

Handle - Canopy, 16  
 Handle - Fuel Valve, 69  
 Heat Control, 89  
 Heat Shield Assy, 3  
 Heat System, 89  
 Heated Pitot Tube, 102  
 Heater - Muffler, 64  
 Holder - Compass Card, 91  
 Horizontal Gyro, 87, 91A  
 Horizontal Stabilizer RH LH, 11  
 Horn Assy, 40  
 Horn Assy - Control Column, 51  
 Hose Assy - Brake, 79  
 Hose Assy - Fuel Valve, 69  
 Hourmeter, 91A  
 Housing Assy - Brake, 83  
 Housing Assy - Bungee, 59  
 Housing Assy - Trim Actuator, 59

### I

Indicator - Airspeed, 85, 91  
 Indicator Assy - Flap, 54  
 Induction Air Duct Assy, 64  
 Inner Track Assy - Canopy, 16  
 Inner Track - Seat, 23  
 Inner Wheel Half Assy - Main, 33  
 Inner Wheel Half Assy - Nose, 35  
 Instrument Cluster, 85, 91, 98  
 Instrument Panel, 105  
 Instrument Panel Brace, 3

### J

Junction - Vent Drain, 9

### L

Landing Light Instl, 19  
 Lever - Air Vent, 3  
 Lever Assy - Seat, 24  
 Light Assy - Wing, 6  
 Light Assy - Tail, 21  
 Light - Cabin Dome, 93  
 Lift Detector, 93  
 Link Assy - Bungee, 59  
 Link Assy - Flap, 55  
 Lock - Canopy, 16  
 Lower Cowl Assy, 19

### M

Manometer Assy, 71, 76  
 Master Cylinder - Brake, 82  
 Master Cylinder - Brake, 83  
 Main Landing Gear-Bracket Assy, 27  
 Main Landing Gear - Instl, 27  
 Main Landing Gear - Wheel & Brake Assy, 33  
 Mass Balance - Horizontal Stab. RH, 11  
 Mass Balance - Horizontal Stab. LH, 12  
 Mass Balance - Vertical Stabilizer, 14  
 Mass Balance - Aileron, 2  
 Mixture Control, 91  
 Mounting Plate Assy - Bungee, 59  
 Muffler - Exhaust, 64

### N

Nose - Axle Rod, 30  
 Nose Fork Assy, 30  
 Nose Landing Gear Installation Assy, 3  
 Nose Torque Tube & Yoke Assy, 30  
 Nose Wheel Assy, 35

### O

Optional Equipment, 110  
 Outer Track Assy Canopy LH, 16  
 Outer Track Assy Canopy RH, 16  
 Outer Track - Seat, 23  
 Outer Wheel Half Assy - Main, 33  
 Outer Wheel Half Assy Nose, 35

### P

Pad Assy - Seat, 23  
 Panel - Aft, 3  
 Panel Assy - Wing, 4  
 Parking Brake, 81  
 Parking Brake Control, 81, 91  
 Pedal, Brake, 49  
 Pinion - Trim, 57  
 Piston Assy - Brake, 34  
 Placard, 95  
 Plate - Brake, 49  
 Plate Assy - Bungee Mounting, 59  
 Plate Assy - Main Fairing, 37  
 Plate Assy - Nose Fairing, 38



## ALPHABETICAL INDEX

### BY PAGE NUMBER

#### P (Cont.)

Plexiglass - Canopy, 16  
 Pressure Plate Assy - Brake, 33  
 Primer - Fuel, 69, 91  
 Propeller & Spinner, 62  
 Pulley - Control System, 40  
 Pulley Group Assy, Control System, 45  
 Pump - Electrical Fuel, 70, 77  
 Pump - Vacuum, 89  
 Push Rod Assy - Control Column, 51

#### R

Radio Support Assy, 3  
 Regulator - Vacuum System, 87  
 Regulator - Voltage, 93  
 Relay - Starter, 93  
 Retainer - Window, 3  
 Retainer - Wing Root, 9  
 Rheostat, 91  
 Ring - Grease Seal Main Gear, 33  
 Rudder, 14  
 Rudder Control Installation, 45  
 Rudder and Brake Installation, 49  
 Rudder Tip, 14

#### S

Seal - Air Vent, 3  
 Seal - Canopy, 16  
 Seal - Instrument Deck, 3  
 Seal - Window, 3  
 Seal - Wing Root, 9  
 Seat Adjustment Plate, 23  
 Seat - Base Assembly, 23  
 Seat Belt Assembly, 25  
 Seat Bumper, 23  
 Seat Cover, 23  
 Seat Cushion Assembly, 23  
 Seat Frame Assembly, 23  
 Seat - Inner Track, 23  
 Seat Installation, 23  
 Seat Lever Assembly, 24  
 Seat - Outer Track, 23  
 Seat Pad Assembly, 23  
 Seat Slide Assembly, 23  
 Seat Track Assembly, 13  
 Shaft - Trim Actuator, 59

#### S (Cont.)

Shaft - Trim Wheel, 57  
 Shield Assembly - Heat, 3  
 Shim, Bungee Support Assy, 59  
 Shuttle Valve - Brake, 79  
 Spar Assembly, 3  
 Spar Stiffener - Flange, 11  
 Spare Fuse Holder, 91  
 Spinner, 62  
 Spinner Assembly, 62  
 Spinner Back Plate Assembly, 62  
 Spinner Bracket Assembly, 62  
 Spinner Bulkhead, 62  
 Stabilizer - Tab Assembly, 11  
 Stabilizer - Bellcrank, 11  
 Stall Warning Unit, 93  
 Starter Relay, 93  
 Static Button, 85  
 Strap Assembly - Canopy Outer, 16  
 Strap Assembly - Baffle, 66, 67  
 Strap Support - Engine, 64  
 Strut Assembly - Nose Gear, 30  
 Suction Gauge, 87, 91A  
 Sun Screen Installation, 109  
 Support Assembly - Battery, 3  
 Support Assembly - Bungee, 59  
 Support Assembly - Control System, 40, 42  
 Support Assembly - Trim Wheel, 57  
 Support - Baggage Floor - Aft, 3  
 Support - Baggage Floor - Fwd, 3  
 Support Bearing - Stabilizer, 11  
 Support Bearing - Wing, 6  
 Support - Windshield Frame, 16  
 Switch - Ignition, 91  
 Switch - Rocker, 91  
 Switch - Master, 91  
 Switch - Starter, 91  
 Switch - Stall Warning, 93

#### T

Tab Assy - Stabilizer, 11  
 Tab - Rudder, 14  
 Tail Cover, 4A  
 Tail Light Assy & Instl, 21  
 Tailcone Instl, 21  
 Tachometer, 91  
 Temperature Gauge, 108  
 Thermistor - Oil Temperature, 64  
 Throttle Control, 91



## ALPHABETICAL INDEX

BY PAGE NUMBER

### T (cont)

Tie Down - Battery, 3  
Tie Down Rod - Battery, 3  
Tie Down Ring - Wing, 6  
Tire - Main, 33  
Tire - Nose, 35  
Torque Plate Assy - Main Gear, 33  
Torque Tube - Trim Actuator, 59  
Torque Tube & Yoke Assy Nose Gear, 30  
Track Assy - Inner Canopy, 16  
Track Assy - Seat, 23  
Trim Actuator Assy, 59  
Trim Actuator Guide Assy, 59  
Trim Actuator Housing Assy, 59  
Trim Actuator Shaft, 59  
Trim Wheel Assy, 57  
Trim Wheel Bracket Assy, 57  
Trim Wheel Support Assy, 57  
Tube Assy - Carb Heat, 64  
Tube Assy - Control System, 42  
Tube Assy - Flap, 54  
Tube Assy - Flap Torque, 6  
Tube - Main, 33  
Tube - Nose, 35  
Turn & Bank Indicator, 91A

### U

Universal Joint - Control Column, 51  
Upholstery and Insulation, 100, 101  
Upper Cowl Assy, 19

### V

Vacuum Pump, 87  
Vacuum System Regulator, 87  
Valve Assy - Heating System, 89  
Valve - Brake Shuttle, 79  
Valve Handle - Fuel, 69  
Valve - Fuel, 69  
Vent Drain Assy, 71  
Vent Drain - Junction, 9  
Ventilator Assy - Canopy, 16  
Vertical Speed Indicator, 85, 91A  
Vertical Stabilizer Assy, 14  
Voltage Regulator, 93

### W

Warning Unit - Stall, 93  
Weight - Mass Balance, 6, 11, 12, 14  
Wheel Assembly - Main, 33  
Wheel - Control, 51  
Wheel Fairing Installation Main LH, 37  
Wheel Fairing Installation Main RH, 37  
Wheel Fairing Installation Nose, 38  
Window, 3  
Window Retainer, 3  
Window - Seal Felt, 3  
Windshield Assembly, 16  
Windshield Frame Assembly, 16  
Windshield Frame - Support, 16  
Wing Assembly, 6  
Wing - Light Assembly, 6  
Wing Panel Assembly, 6  
Wing Root Assembly, 9  
Wing Root - Retainer, 9  
Wing - Support Bearing, 6  
Wing Tip Assembly, 6  
Wing Walk, 9